



Do not use  
Aluminium spacer  
Cod. 205866



Db-killer N°52  
Cod.308421801

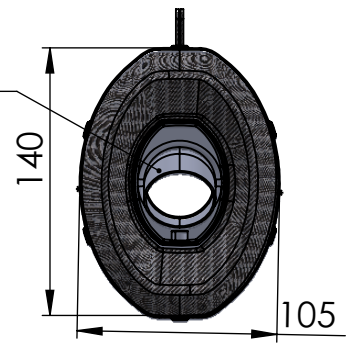

Bracket black S.s  
Cod. 3014336501

Knurled collar nut  
M6 Cod.200333

**NB.Brand Leovince  
on this side**

Knurled collar nut  
M8 Cod.200298

**ORIGINAL FRAME**  
Please remove two  
original rubber silent-block  
located inside

Aluminium spacer  
Cod. 205771


Carbon clamp FR2  
cod.308448501

2x Aluminium spacer  
ø29-ø23.5Xø8,5Xh7  
Cod. 205153

E13 92R-02 10395

Aluminium spacer  
ø27X8,5  
Cod. 204321

Allen screw M8X45  
T.C.E.I.Z.B.  
Cod.201450

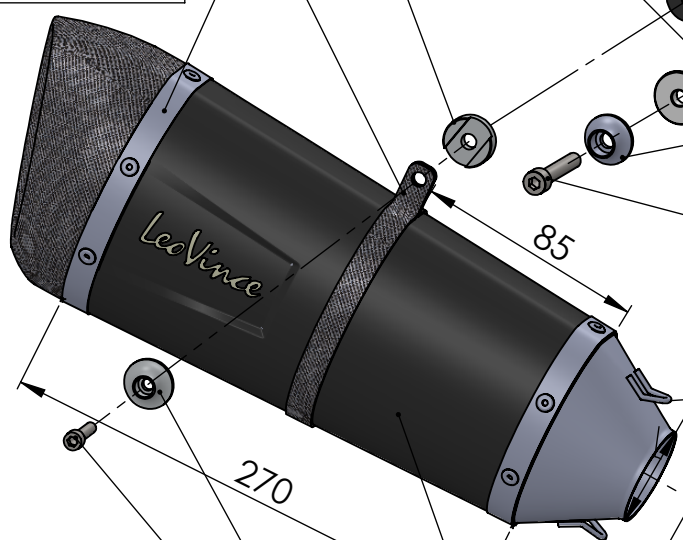

Pipe N°1310 s.s  
cod. 3014336201

2x Short helical  
spring tensile  
cod. 303949001

Allen screw M6X25  
T.C.E.I.Z.B.  
Cod.200586

Aluminium spacer  
ø27Xø6.5  
Cod. 205767

FACTORY S Stainless s. black  
Øi 54X270 RHS  
Cod.3014336485

Strap in S.s.Ø57  
Cod.300057530

**DO NOT  
USE ORIGINAL  
GRAPHITE  
BUSHING**

**ART. 14336SB**

KAWASAKI NINJA 1000 SX / TOURER (fits with original panniers)

SLIP-ON -FACTORY-S - BLACK - APPROVED